


HD-CA4 Concrete Anchor Pg. 170

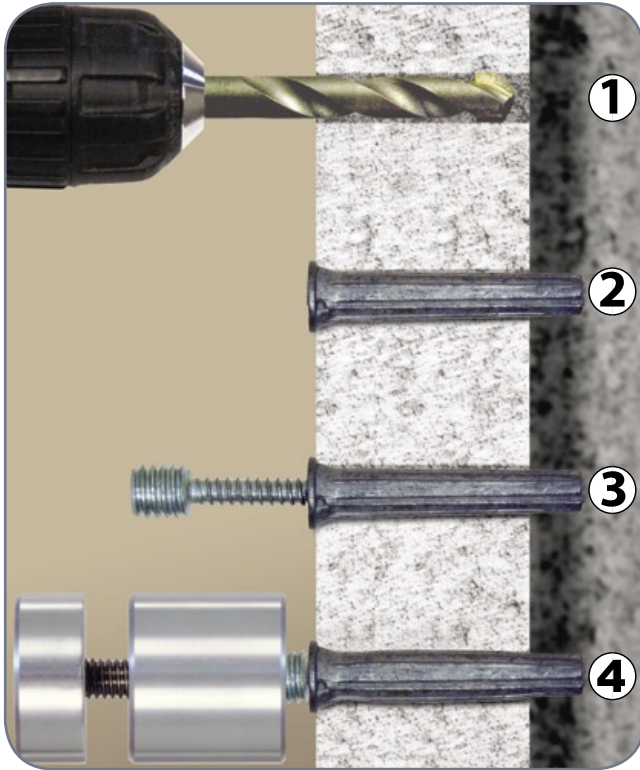

(1) Pre-drill a 1/4" hole x 1-1/2" deep in concrete, cinder block or other masonry surface.

(2) With a hammer, being careful not to deform the metal, lightly drive the anchor into the surface until the head is as flush as possible.

(3) Screw the #8 Screw or appropriate Combination Screw into the center of the installed anchor.

(4) Attach whatever StandOff Systems parts needed for the application to complete the assembly.