


HD-FDA Wallboard Anchor Pg. 171

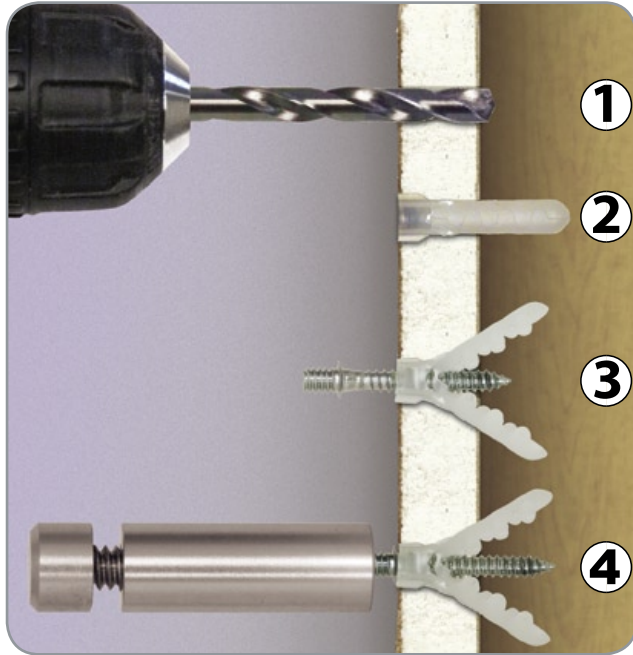

(1) Drill a 1/4" diameter hole in the wallboard.

(2) Insert the anchor into the hole and gently tap it flush with the surface being careful not to damage the wallboard.

(3) Insert a #8 Screw or the appropriate Combination Screw and tighten with a hex key until the hardware is flush with the wallboard surface. The stud will spread the fingers of the HD-FDA to hold the anchor secure.

(4) Attach a StandOff barrel or other hardware to the stud and assemble the rest of the parts needed for the installation.

Note: The HD-FDA is intended as a light duty wallboard anchor. Care should be taken not to overload assemblies attached with this anchor.