


## Knife-Edge Wood Inserts Catalog Pg. 9

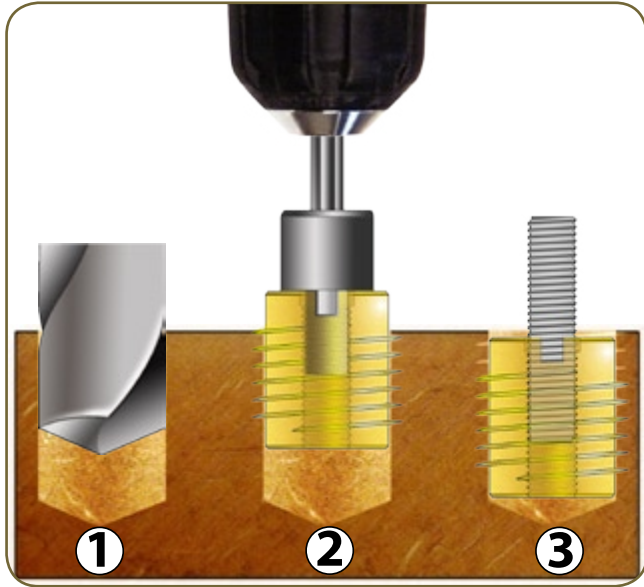

(1) Pre-drill mounting surface to the proper hole size from the chart below. For proper assembly, drill the hole just deep enough for the insert to bottom with it's top just slightly below the mounting surface. Drilling deeper does not add any strength to your installation.

(2) Use the appropriate Woodnut Driver to screw the insert into the wood. If you're only doing a few, they can be successfully seated with the correct size screwdriver. Make sure it fits the insert properly so you don't slip and damage it's internal threads. For greater strength a couple drops of woodglue can be applied to the outer threads of the Wood Insert.

(3) Install the proper size stud, attach the appropriate StandOff Systems™ parts for your application and tighten.

### Wood Inserts Drill Sizes

Part	Thread	Length	Drill Size
HD-WI1	10-24	1/2"	3/8"
HD-WI2	1/4-20	1/2"	3/8"
HD-WI3	5/16-18	5/8"	1/2"