


Wallboard Anchor & W/Tool Catalog Pg. 7

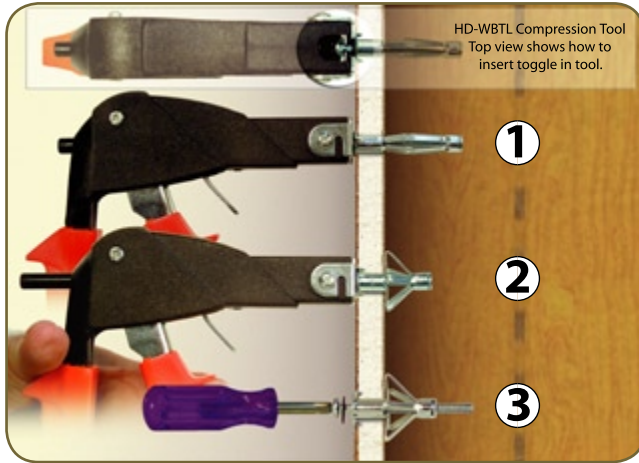

(1) Wallboard Anchors require the Anchor Tool to compress the anchor once it is inserted through a pre-drilled 11/32" hole. The top photo shows how the Anchor Tool grips the Anchor by the screwhead to compress it.

(2) Carefully determine and mark the locations for the anchors and install them as shown here. The head of the anchor should sit flush with the wallboard surface when the installation is correct.

(3) Attach the appropriate StandOff Systems™ part needed for your design and you're done! These anchors do not provide a mounting stud but use a 10-24 machine screw for mounting your parts.