


Wallboard Stud Assemblies Catalog Pg. 8

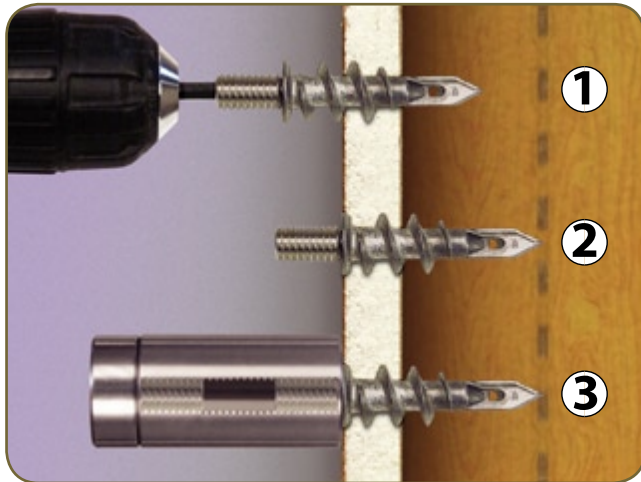

(1) Wallboard Stud Assemblies are fast and easy to use. These self-drilling assemblies require only the proper size hex key driver and a drill/driver.

(2) Carefully determine and mark the locations for the anchors and install them as shown here. The head of the anchor should sit flush with the wallboard surface when the installation is correct.

(3) Attach the StandOff Systems™ parts for your application and you're done! These anchors are not intended as heavy load-bearing fasteners. For applications requiring more load capacity with wallboard, toggle type anchors or expansion anchors (below), are recommended.