


Wood Mount Hanger Screws Catalog Pg. 5

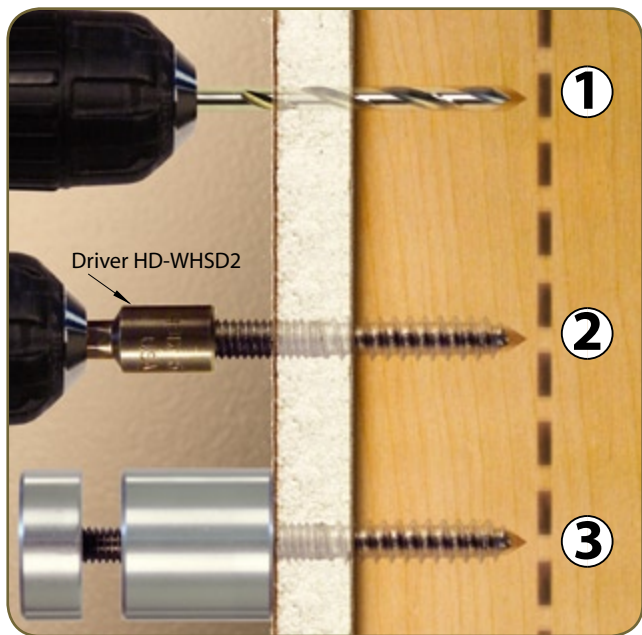

(1) Locate the center of a wall-stud in the wall. Mark the location where the Wood Mount Hanger Screws will be located. Pre-drill the proper size hole for the Hanger Screw size to be used according to the chart below.

(2) Use the proper driver, HD-WSD1 or HD-WSD2, to drive the Wall Mount Hanger Screws into the wall-stud. Candle wax or bar soap scraped onto the wood screw threads and the mounting threads will help in driving the Hanger Screws into the stud and in driver removal. This is especially helpful if you are driving with hand tools.

(3) Make sure to leave as much thread exposed as you need for your parts. It is difficult to back the Wood Mount Hanger Screws out if you run them in too deep. Mount the StandOff Systems parts and you're done.

Wood Mount Hanger Screws Drill Size

Part	Thread x Length	Overall	
		Length	Pre-drill
HD-WHS1	10-24 x 5/8"	1-1/2"	1/8"
HD-WHS2	1/4-20 x 1"	2-3/16"	3/16"
HD-WHS3	5/16-18 x 9/16"	1-1/2"	1/4"
HD-WHS4	5/16-18 x 1"	2-1/2"	1/4"
HD-WHS5	5/16-18 x 2"	4-1/4"	1/4"
HD-WHSD1	Driver for 10-24 size		
HD-WHSD2	Driver for 5/16-18 size		