


HD-FDA0/1/2 Wallboard Anchor

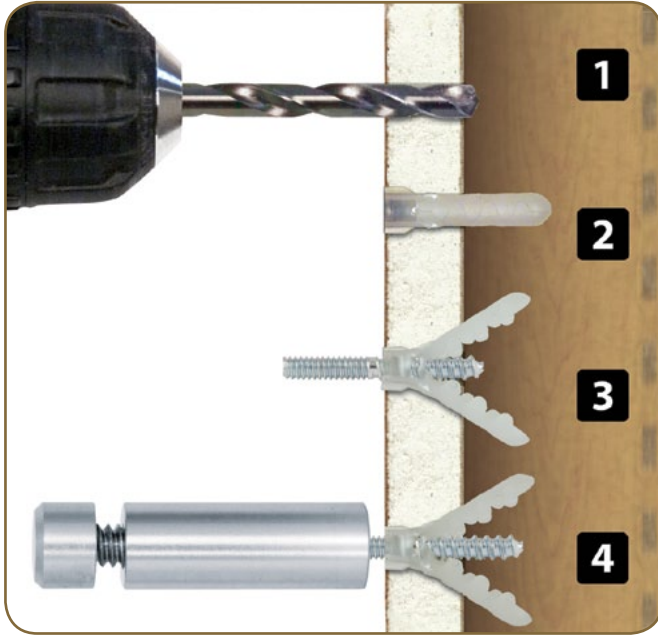

(1) Pre-drill a 1/4" diameter hole in the wallboard.

(2) Insert the anchor into the hole with the small fins oriented vertically and gently tap it flush with the surface being careful not to damage the wall material.

(3) Insert a #8 Screw or the appropriate Combination Screw and tighten down until it's flush with the wall material surface. The screw will spread the jaws of the HD-FDA to hold the anchor secure into wall.

(4) Attach a **Gyford StandOff Systems®** part needed for your application.

NOTE: *The HD-FDA is intended as a light to medium wallboard anchor.*

IMPORTANT

These HOW TO instructions are GUIDELINES ONLY. Your installation may be different from those shown here. NO SAFETY GUARANTEE is expressed or implied in any installation unless such guarantee is provided IN WRITING by Gyford Productions on installations that Gyford Productions does. It is the responsibility of the INSTALLER and/or END USER to ensure that the parts and materials used in any installation are specified and engineered to meet the demands of their intended purpose.

Call 775.829.7272 to speak with our knowledgeable Client Solutions Specialists about your installation.