


Zip-Toggle Anchors

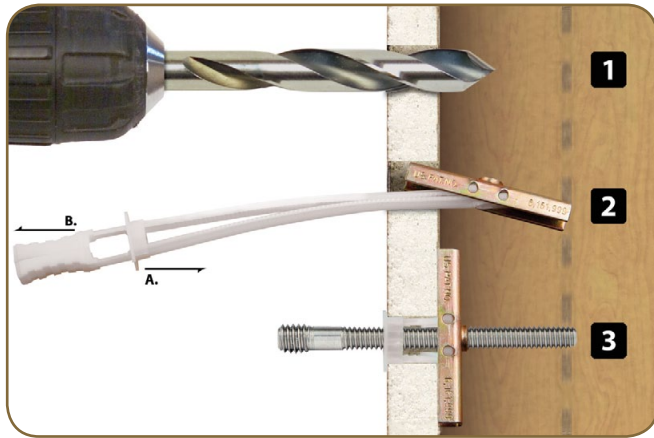

(1) Pre-drill wallboard or hollow wall with a 1/2" bit.

(2) Push the metal wing end of the Zip-Toggle through the hole as shown. When the wing flips back into the open position, push the lock ring (A) up as tight as possible against the wall while pulling the tab (B) straight away from the wall. Once the assembly is tight on the wall, pull the loop apart, and bend the zippers to the wall to break them off. Anchor type may vary but will install similar to diagram.

(3) Thread the appropriate hardware into anchor insuring it threads through the wing portion of the anchor. Attach your **Gyford StandOff Systems®** parts for your application.

NOTE: For part numbers HD-ZTA, HD-ZTM, HD-ZTOG1, HD-ZTOG2

IMPORTANT

These HOW TO instructions are GUIDELINES ONLY. Your installation may be different from those shown here. NO SAFETY GUARANTEE is expressed or implied in any installation unless such guarantee is provided IN WRITING by Gyford Productions on installations that Gyford Productions does. It is the responsibility of the INSTALLER and/or END USER to ensure that the parts and materials used in any installation are specified and engineered to meet the demands of their intended purpose.

Call 775.829.7272 to speak with our knowledgeable Client Solutions Specialists about your installation.